ADFweb

Electronic Devices

SNMP Manager / CANopen - Converter
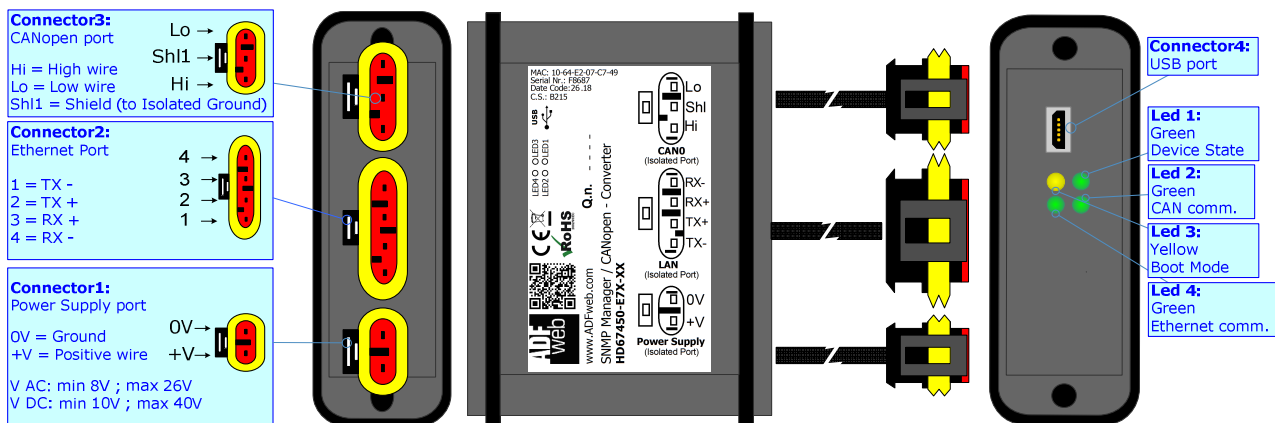
To obtain the complete manual please go to

www.adfweb.com/download/filefold/MN67450_ENG.pdf

To obtain the new version of this box sheet please go to

www.adfweb.com/download/filefold/BS67450-E7x_ENG.pdf

CONNECTION SCHEME:

Connector3:
CANopen port

Hi = High wire
Lo = Low wire
Shl1 = Shield (to Isolated Ground)

Lo →
Shl1 →
Hi →

Connector2:
Ethernet Port

1 = TX -
2 = TX +
3 = RX +
4 = RX -

4 →
3 →
2 →
1 →

Connector1:
Power Supply port

0V = Ground
+V = Positive wire

V AC: min 8V ; max 26V
V DC: min 10V ; max 40V

0V →
+V →

Connector4:
USB port

Led 1:
Green
Device State

Led 2:
Green
CAN comm.

Led 3:
Yellow
Boot Mode

Led 4:
Green
Ethernet comm.

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67450.
To obtain this software please go to

www.adfweb.com/download/filefold/SW67450.zip

ADFweb.com   s.r.l.
www.adfweb.com
info@adfweb.com
support@adfweb.com

Manual	Box-Sheet	Software