![ADFweb Electronic Devices logo]

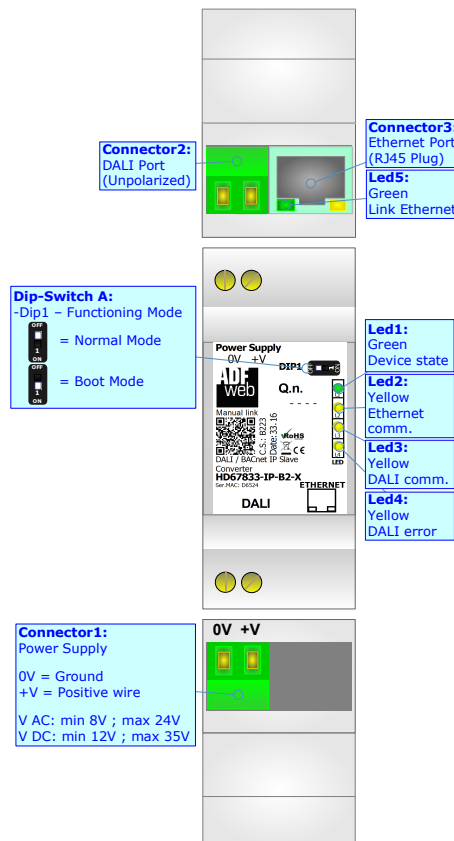# DALI / BACnet IP Slave - Converter

To obtain the complete manual please go to:

www.adfweb.com/download/filefold/MN67833_ENG.pdf

To obtain the new version of this box sheet please go to:

www.adfweb.com/download/filefold/BS67833-IP-B2_ENG.pdf

CONNECTION SCHEME:

Connector2:
DALI Port
(Unpolarized)

Connector3:
Ethernet Port
(RJ45 Plug)

Led5:
Green
Link Ethernet

Dip-Switch A:
-Dip1 – Functioning Mode

= Normal Mode

= Boot Mode

Led1:
Green
Device state

Led2:
Yellow
Ethernet comm.

Led3:
Yellow
DALI comm.

Led4:
Yellow
DALI error

Connector1:
Power Supply

0V = Ground
+V = Positive wire

V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67833.

To obtain this software please go to:

www.adfweb.com/download/filefold/SW67833.zip

ADFweb.com S.r.l.
www.adfweb.com
support@adfweb.com

Manual	Box-Sheet	Software

info@adfweb.com