

User Manual

Revision 1.001
English

DALI / Ethernet - Converter

(Order Code: HD67839-B2-Y, HD67839-B2-N)

for Website information:

www.adfweb.com?Product=HD67839

for Price information:

www.adfweb.com?Price=HD67839-B2

Benefits and Main Features:

- ⊕ Very easy to configure
- ⊕ Electrical isolation
- ⊕ Temperature range: -40°C/85°C (-40°F/185°F)



User Manual

For others DALI products, see also the following links:

Converter DALI to

- www.adfweb.com?Product=HD67822
- www.adfweb.com?Product=HD67831
- www.adfweb.com?Product=HD67832
- www.adfweb.com?Product=HD67833
- www.adfweb.com?Product=HD67834
- www.adfweb.com?Product=HD67835
- www.adfweb.com?Product=HD67836
- www.adfweb.com?Product=HD67837
- www.adfweb.com?Product=HD67838
- www.adfweb.com?Product=HD67840
- www.adfweb.com?Product=HD67842
- www.adfweb.com?Product=HD67843
- www.adfweb.com?Product=HD67844
- www.adfweb.com?Product=HD67845
- www.adfweb.com?Product=HD67848
- www.adfweb.com?Product=HD67849
- www.adfweb.com?Product=HD67850
- www.adfweb.com?Product=HD67941

- (KNX)**
- (RS485)**
- (BACnet/IP Master)**
- (BACnet/IP Slave)**
- (CAN)**
- (CANopen)**
- (DeviceNet Master)**
- (DeviceNet Slave)**
- (DMX)**
- (EtherNet/IP)**
- (Modbus Master)**
- (Modbus Slave)**
- (Modbus TCP Master)**
- (Modbus TCP Slave)**
- (PROFINET)**
- (SNMP Manager)**
- (SNMP Agent)**
- (MQTT)**

Do you have an your customer protocol?

www.adfweb.com?Product=HD67003

Do you need to choose a device? do you want help?

www.adfweb.com?Cmd=helpme

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	6
CONFIGURATION	6
POWER SUPPLY	7
FUNCTION MODES	8
LEDS	9
DALI	10
ETHERNET	11
USE OF COMPOSITOR SW67839	12
NEW PROJECT / OPEN PROJECT	13
SOFTWARE OPTIONS	14
SET COMMUNICATION	16
DALI ACCESS	17
UPDATE DEVICE	18
USE OF DALI CONSOLE SOFTWARE	20
STRUCTURE OF THE SOFTWARE	21
SETUP	22
NETWORK SETTING	24
ETHERNET PROTOCOLS	29
DALI SCI	30
DALI SCI2	33
DALI SCI3	38
DALI SCI4	50
MECHANICAL DIMENSIONS	59
ORDERING INFORMATIONS	60
ACCESSORIES	60
DISCLAIMER	61
OTHER REGULATIONS AND STANDARDS	61
WARRANTIES AND TECHNICAL SUPPORT	62
RETURN POLICY	62

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ✚ Updated
- ✚ Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page www.adfweb.com/download/ and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	15/06/2016	Ff	All	First Release
1.001	11/03/2019	Ff	All	Added SCI protocols

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning. ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

SECURITY ALERT:**GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

INTENDED USE

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

QUALIFIED PERSONNEL

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

RESIDUAL RISKS

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

CE CONFORMITY

The declaration is made by our company. You can send an email to support@adfweb.com or give us a call if you need it.

EXAMPLE OF CONNECTION:

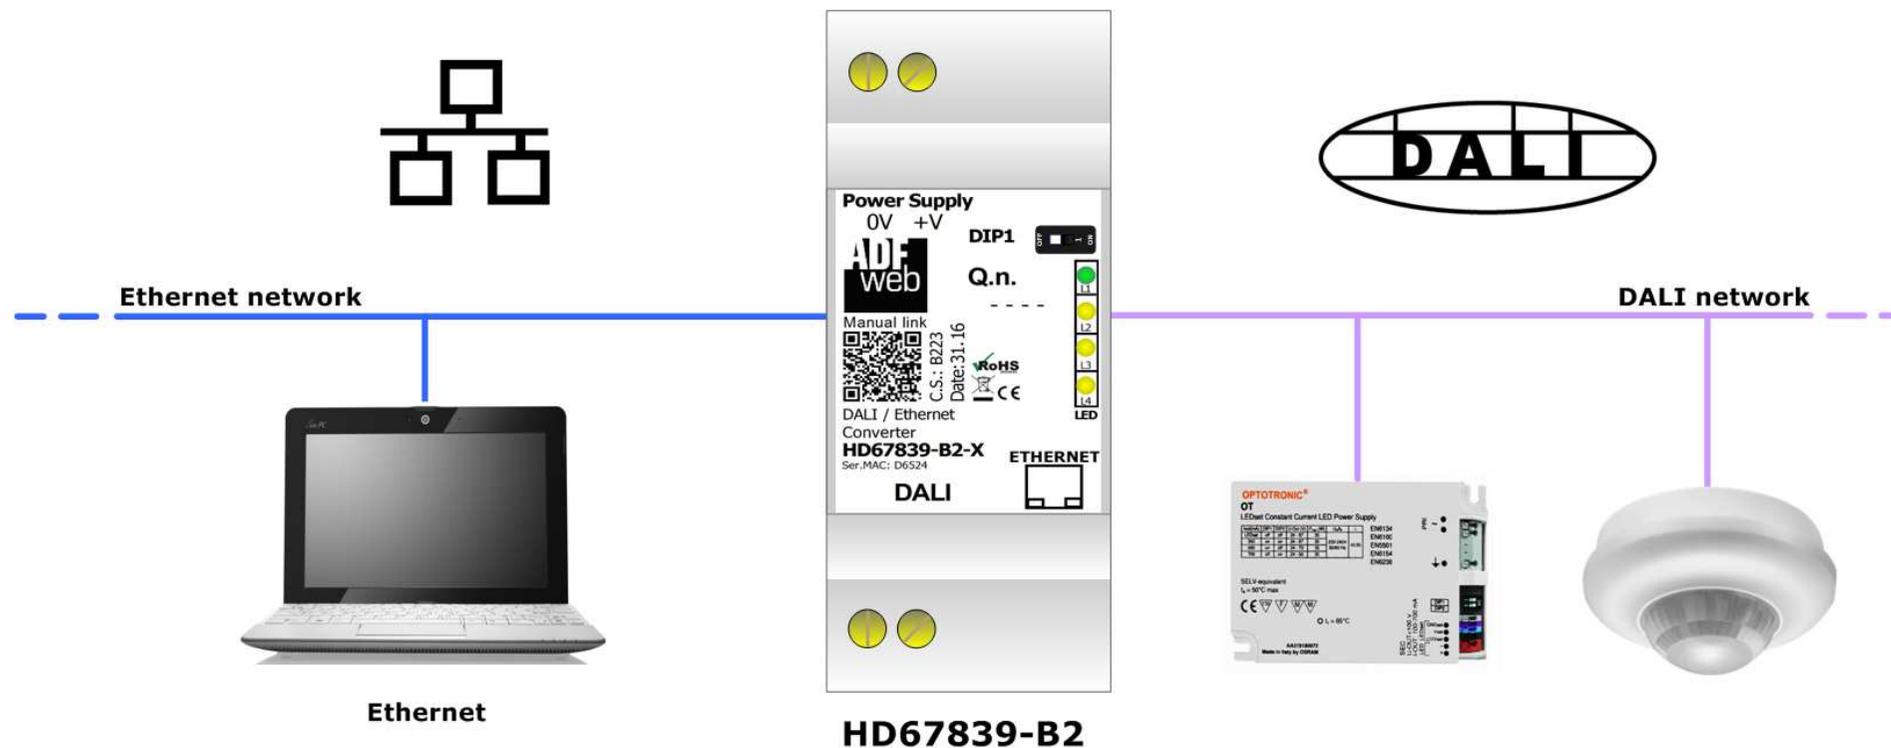

CONNECTION SCHEME:

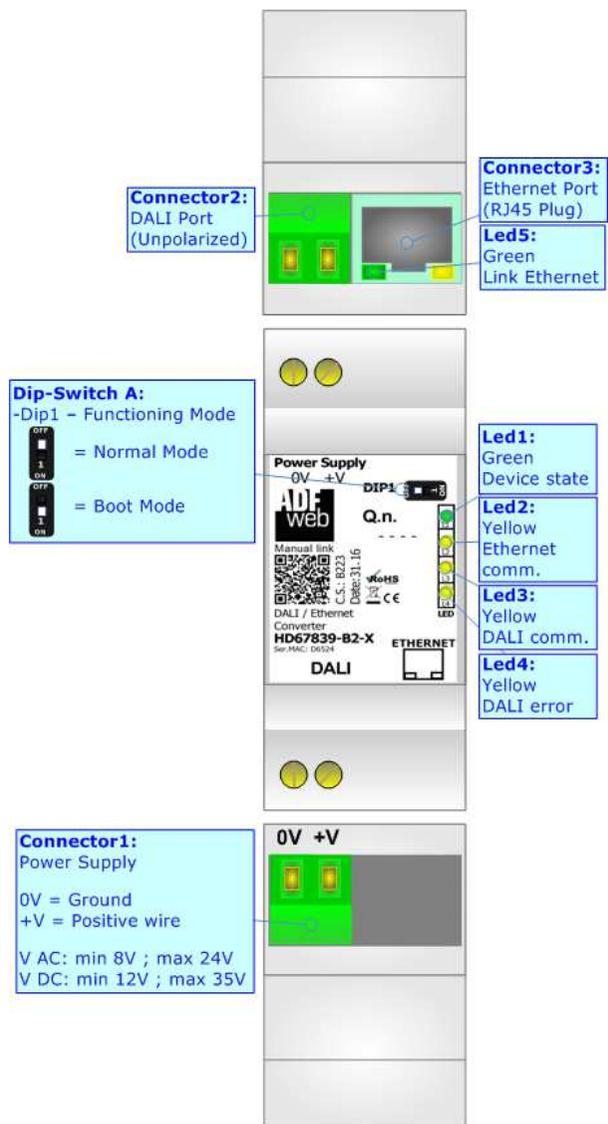


Figure 1: Connection scheme for HD67839-B2

CHARACTERISTICS:

The HD67839 is a DALI / Ethernet - Converter.

It has the following characteristics:

- Up to 64 devices on DALI bus;
- Configurator for DALI network/devices;
- DALI 1 and DALI 2 supported;
- SCI1, SCI2 protocols supported;
- Isolation between DALI – Ethernet, Power Supply - Ethernet. Additional isolation Power Supply – DALI for HD67839-B2-N version;
- Two-directional information between DALI bus and Ethernet bus;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 8...24V AC or 12...35V DC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].

CONFIGURATION:

You need “DALI Console” software on your PC in order to perform the following:

- Configure the DALI network;
- Setup the DALI devices (groups, scenes, IDs, ...);
- Test DALI communication.

You need Compositor SW67839 software on your PC in order to perform the following:

- Define the parameter of Ethernet line;
- Define the parameter of DALI line;
- Update the device.


POWER SUPPLY:

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.


VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V

Consumption at 24V DC:

Device	Consumption [W/VA]
HD67839-B2	3.5

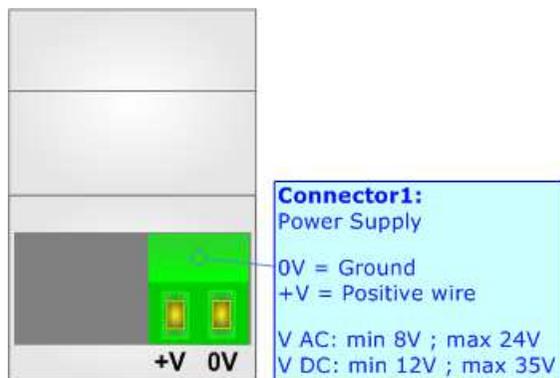

Caution: Not reverse the polarity power

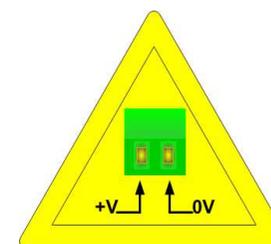

HD67839-B2


FUNCTION MODES:

The device has got two functions mode depending of the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for upload the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.


According to the functioning mode, the LEDs will have specifics functions, see 'LEDS' section.

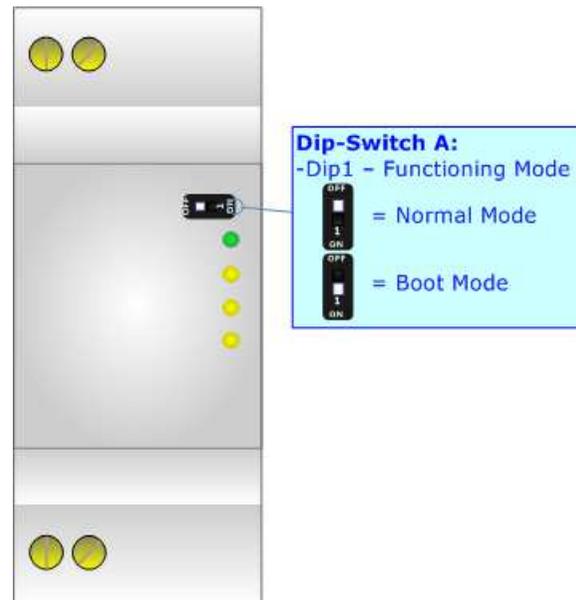

LEDS:


The device has got five LEDs that are used to give information of the functioning status. The various meanings of the LEDs are described in the table below.

LED	Normal Mode	Boot Mode
1: Device State (green)	Blinks slowly (~1Hz)	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
2: Ethernet communication (yellow)	Blinks when Ethernet communication is running	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
3: DALI communication (yellow)	Blinks when DALI communication is running	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
4: DALI error (yellow)	Turns ON when the DALI device is not present	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
5: Ethernet Link (green)	ON: Ethernet cable connected OFF: Ethernet cable disconnected	ON: Ethernet cable connected OFF: Ethernet cable disconnected

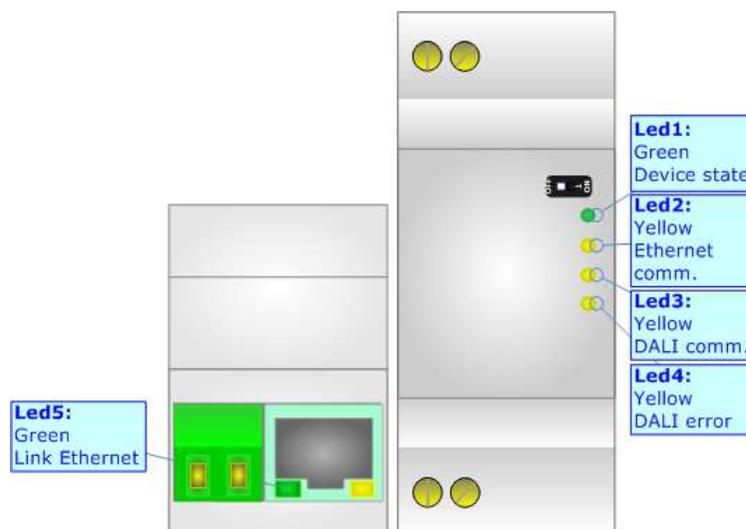

DALI:

DALI stands for “Digital Addressable Lighting Interface” and it is an interface protocol for digital communication between electronic lighting equipment (electronic ballasts, transformers, etc.). With the right choice of individual DALI components an extremely wide range of requirements can be met, from operating the lighting system from a simple light switch to lighting management systems for entire office complexes with thousands of light sources. Using ADFweb.com’s DALI converters, any light source, including incandescent lamps, fluorescent lamps, high-intensity discharge lamps and even LEDs, can be controlled irrespective of whether they are installed in an office, a restaurant or a street light.

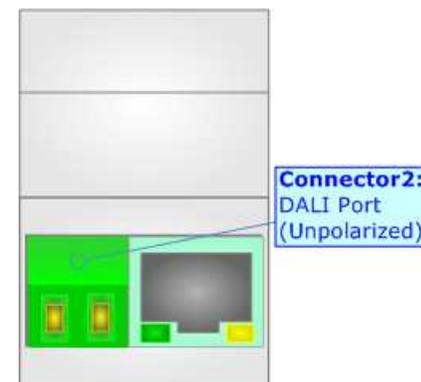


Characteristics	Description
Medium	Shielded Twisted Pair
Topology	Linear, Star or mixed
Device power consumption	Max 250 mA
DALI voltage	9.5 V – 22.5 V (typical 16 V)
Maximum cable length	300 m (1.5 mm ² wire)
Maximum number of DALI devices	64
Baud rate	1200 bps
Maximum number of DALI groups	16
Maximum number of DALI scenes	16

ETHERNET:

The Ethernet port is used for the Ethernet communication, for programming DALI network and for programming the device.

The Ethernet connection must be made using Connector2 of HD67839-B2 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC is recommended the use of a cross cable.

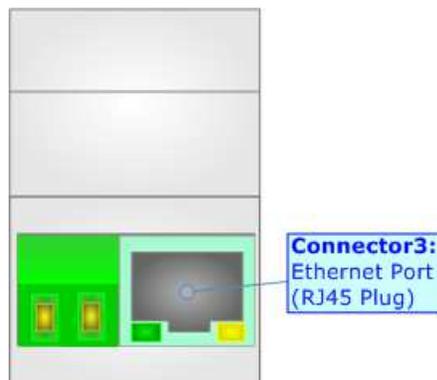

USE OF COMPOSITOR SW67839:

To configure the Converter, use the available software that runs with Windows called SW67839. It is downloadable on the site www.adfweb.com and its operation is described in this document. *(This manual is referenced to the last version of the software present on our web site).* The software works with MSWindows (XP, Vista, Seven, 8, 10; 32/64bit).

When launching the SW67839, the window below appears (Fig. 2).

**Note:**

It is necessary to have installed .Net Framework 4.


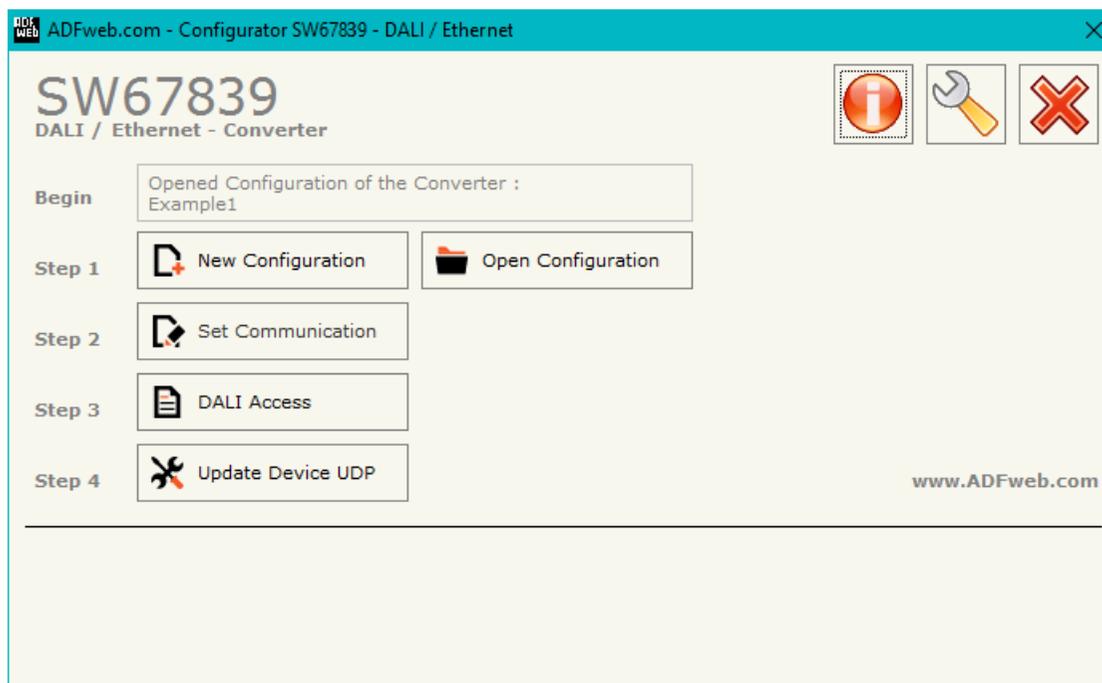


Figure 2: Main window for SW67839


NEW CONFIGURATION / OPEN CONFIGURATION:

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

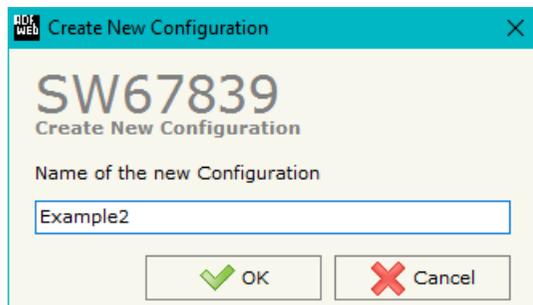

A device’s configuration can also be imported or exported:


- To clone the configurations of a Programmable “DALI / Ethernet - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

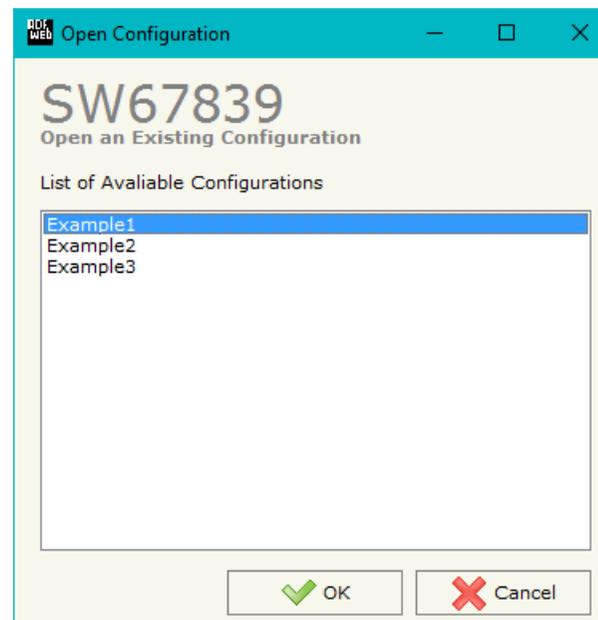


SOFTWARE OPTIONS:

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

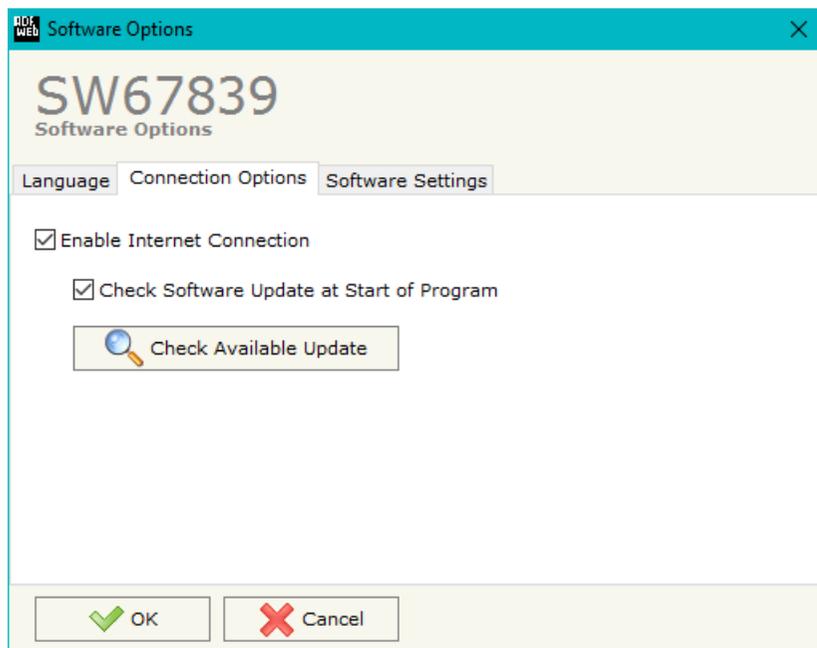

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67839 check automatically if there are updatings when it is launched.

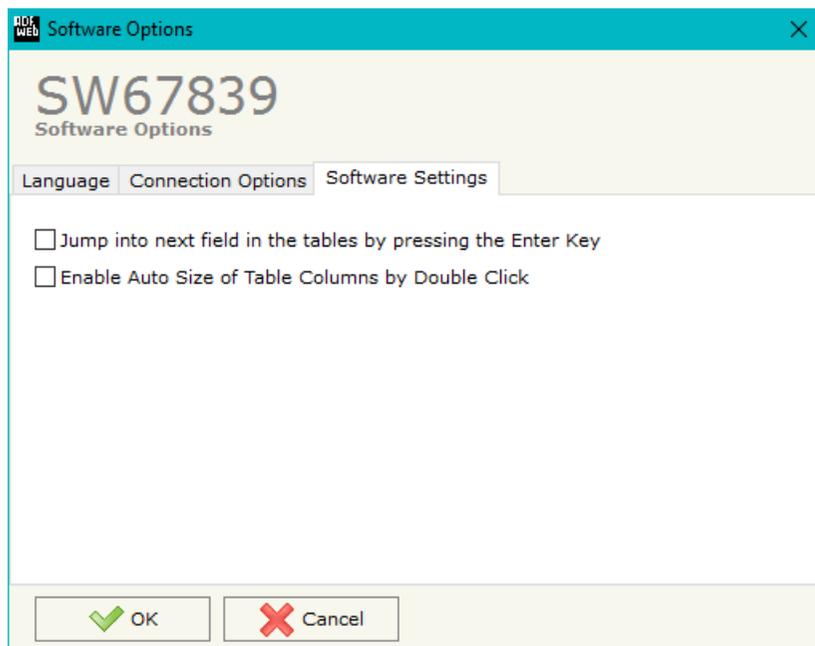

In the section "Software Settings", it is possible to enable/disable some keyboard's commands for an easier navigation inside the tables contained in the different sections of the software.

SET COMMUNICATION:

This section define the fundamental communication parameters of Ethernet bus.

By Pressing the **"Set Communication"** button from the main window for SW67839 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The means of the fields for the "Ethernet" section are:

- In the field **"IP ADDRESS"** the IP address of the converter is defined;
- In the field **"SUBNET Mask"** the SubNet Mask is defined;
- In the field **"GATEWAY"** the default gateway of the Ethernet network is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net.

The means of the fields for the "DALI" section are:

- In the field **"DALI Console Port"** the UDP port used for Ethernet communication is defined;
- If the field **"Switch off DALI on TimeOut"** is checked, the DALI line is switched off if any Ethernet commands is received in the defined **"TimeOut (ms)"**;
- If the option **"Disable DALI Scan"** is checked, the automatic scanning of DALI side is disabled. The DALI side is scanned only on Ethernet command;
- If the option **"Enable DALI 2"** is checked, DALI 2 functions are enabled (normally used with DALI sensors, actuators, exc.).

The screenshot shows a software window titled "Set Communication" for device "SW67839". The window is divided into two main sections: "Ethernet" and "DALI".

Ethernet Section:

- IP ADDRESS:** 192.168.0.10
- SUBNET Mask:** 255.255.255.0
- GATEWAY:** 192.168.0.1 (checkbox is unchecked)

DALI Section:

- DALI Console Port:** 10001
- Switch Off DALI on TimeOut:** (checkbox is unchecked)
- TimeOut (ms):** 0
- Disable DALI Scan:** (checkbox is unchecked)
- Enable DALI 2:** (checkbox is unchecked)

At the bottom of the window are two buttons: "OK" (with a green checkmark) and "Cancel" (with a red X).

Figure 3: "Set Communication" window

DALI ACCESS:

By pressing the “**DALI Access**” button from the main window for SW67839 (Fig. 2) the window “Select the DALI Device Present in the Network” appears (Fig. 4).

This section is used to define the DALI devices connected to the converter. It is enough to check/uncheck the connected/unconnected DALI devices.

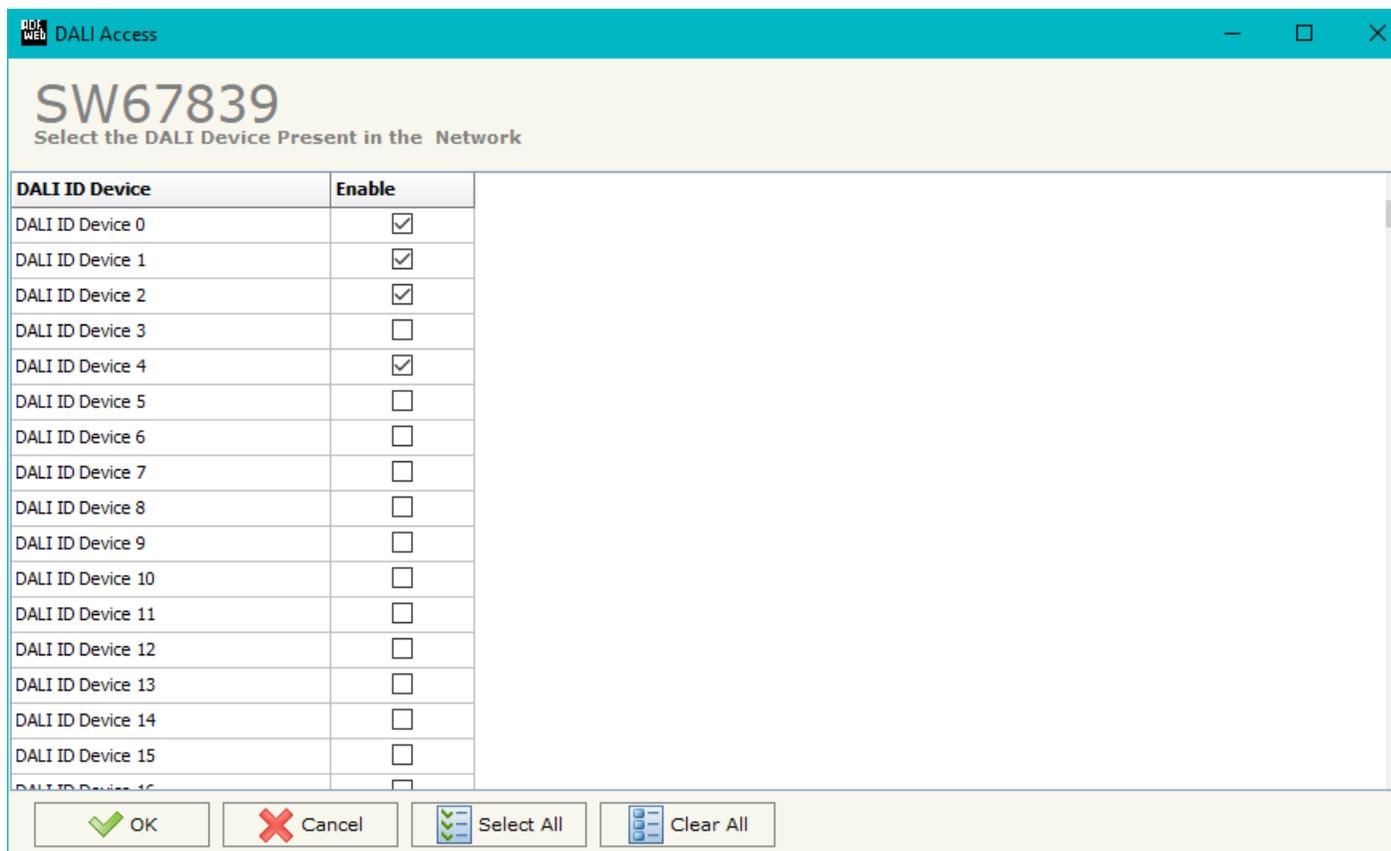


Figure 4: "DALI Access" window

UPDATE DEVICE:

By pressing the **"Update Device"** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP **"192.168.2.205"**;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' at OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn on the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly update.

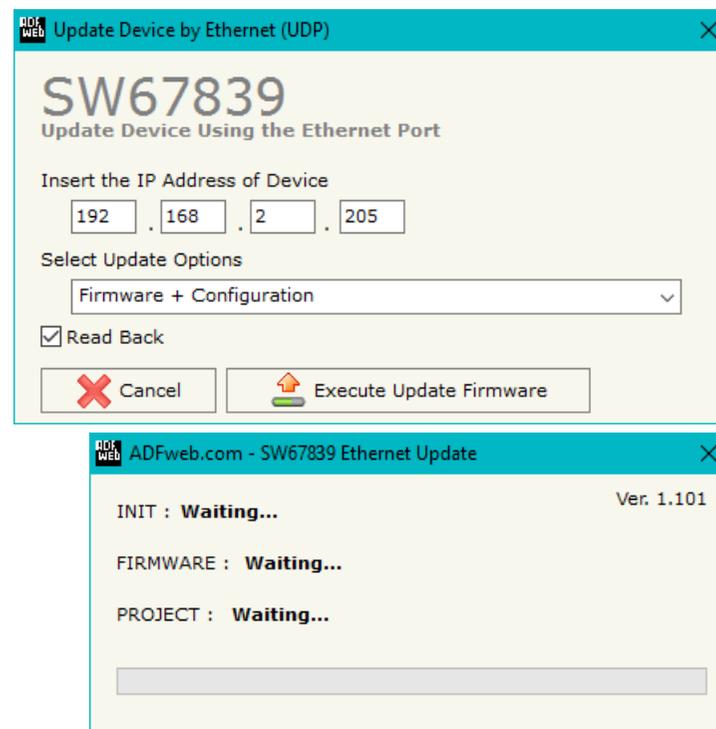


Figure 5: "Update device" windows

 **Note:**
When you install a new version of the software, if it is the first time it is better you do the update of the Firmware in the HD67839 device.

 **Note:**
When you receive the device, for the first time, you also have to update the Firmware in the HD67839 device.

 **Warning:**
If Fig. 6 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- Check the Wi-Fi settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8 or 10 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp -d". Pay attention that with Windows Vista, Seven, 8, 10 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

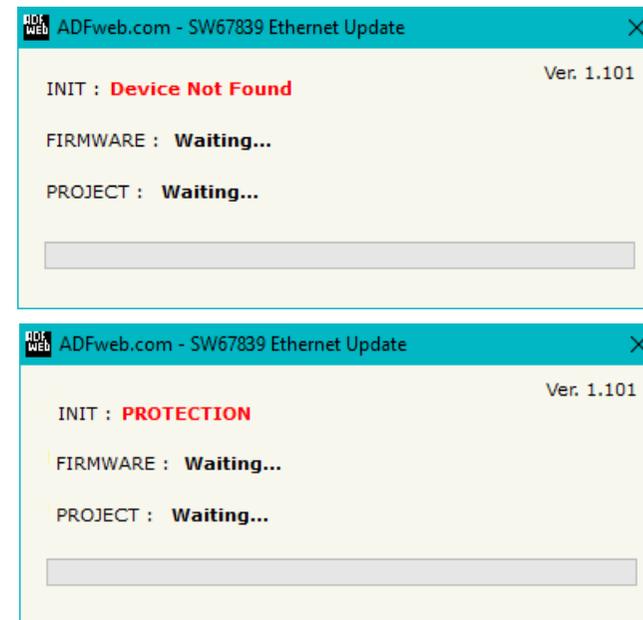


Figure 6: "Protection" window

 In the case of HD67839 you have to use the software "SW67839": www.adfweb.com/download/filefold/SW67839.zip.

USE OF DALI CONSOLE SOFTWARE:

To configure DALI network and test the communication, it is possible to use the available software that runs with Windows called "DALI Console". It is downloadable on the site www.adfweb.com and its operation is described in this document. (This manual is referenced to the last version of the software present on our web site). The software works with MSWindows (XP, Vista, Seven, 8, 10; 32/64bit).

When launching the DALI Console, the window below appears (Fig. 7).


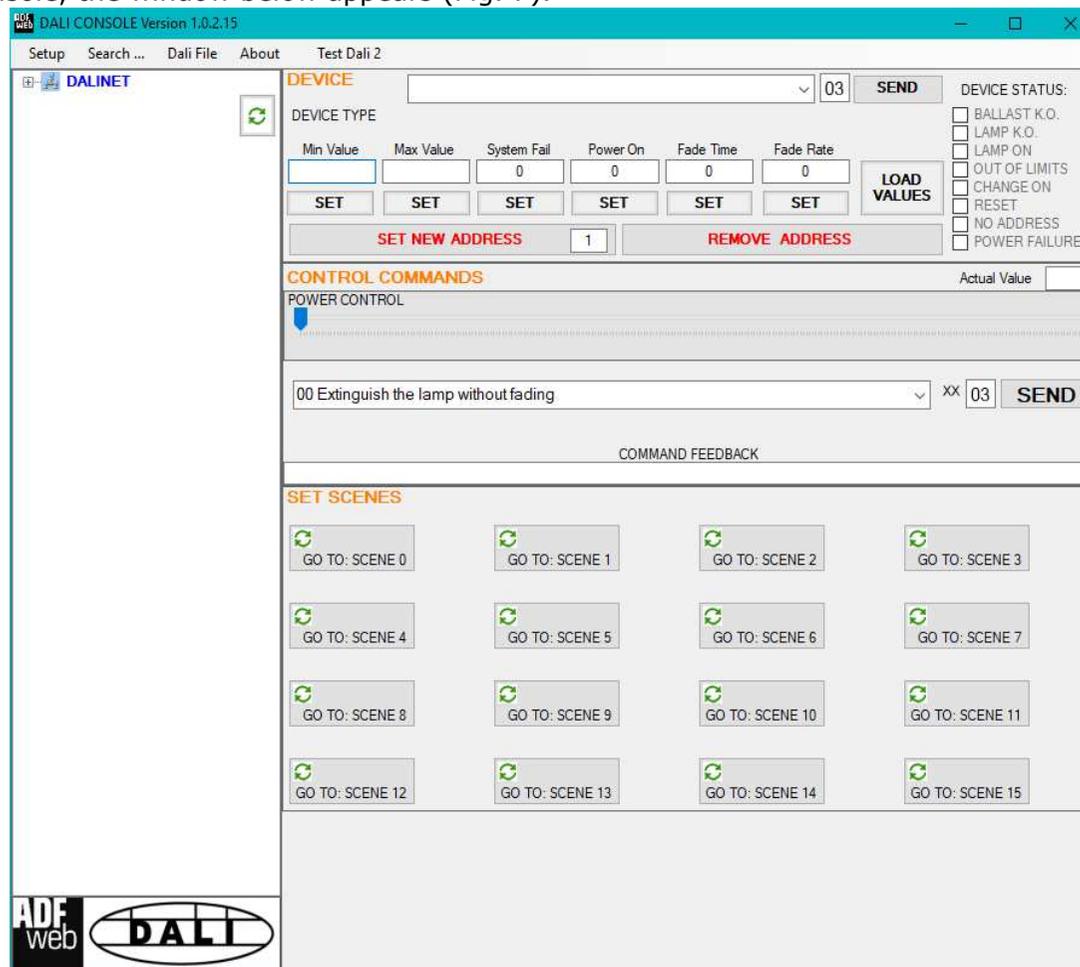


Figure 7: Main window for DALI Console

STRUCTURE OF THE SOFTWARE:

The software layout is very simple and it is structured in this way:

- **"Menu bar"** (Fig. 8, Point 1): it is possible to open the setup window and see the informations about the DALI Console software;
- **"Network view"** (Fig. 8, Point 2): it is possible to see all the DALI devices connected to the HD67839 converter, the groups and the scenes set;
- **"Settings / commands view"** (Fig. 8, Point 3): it is possible to set and manage the parameters to the single DALI device, to the groups or for the full network.

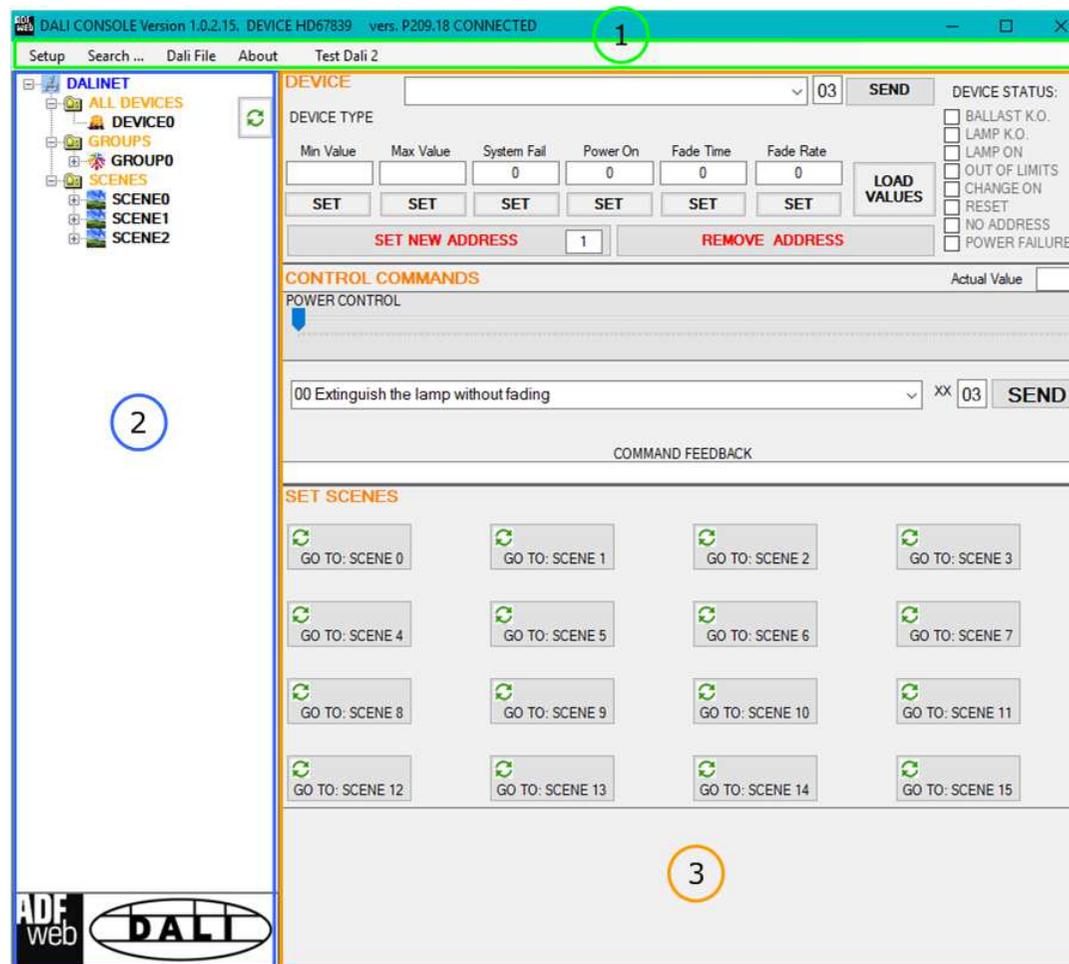

(1) Menu bar

(2) Network view

(3) Settings / commands view

Figure 8: Structure of DALI Console software

MENU BAR

SETUP:

This section defines the connection's parameters to the Ethernet side of the HD67839 converter.

By Pressing the "Setup" button from the menu bar of the DALI Console software, the "SETUP" window appears (Fig. 9).

Setup	
<input checked="" type="radio"/> LAN CONNECTION	
<input type="radio"/> SERIAL CONNECTION	
IP ADDRESS	192.168.2.113
DEVICE PORT	10000
CONSOLE PORT	10001
<input type="radio"/> SCI 1 Protocol	<input type="radio"/> DALI1
<input type="radio"/> SCI 2 Protocol	<input checked="" type="radio"/> DALI2
<input checked="" type="radio"/> SCI 3 Protocol	<input type="checkbox"/> DISABLE AUTOMATIC SCAN
NUM DEVICES	<input checked="" type="checkbox"/> AutoRefresh
62	
CLOSE SETUP	

Figure 9: "Setup" window

The means of the fields for the "SETUP" window are:

- In the field "**IP ADDRESS**" insert the IP address set inside the converter;
- In the field "**DEVICE PORT**" insert the communication port used for the Ethernet communication with the converter (fixed to '10000');
- In the field "**CONSOLE PORT**" insert the communication port used for the Ethernet communication with the converter (defined with SW67839);
- In the fields "**SCI X Protocol**", it is possible to select the Ethernet protocol to use. It is possible to use SCI 1 (from Tridonic), SCI 2 (from Tridonic) or SCI 3 (from ADFweb.com);
- In the fields "**DALIX**", it is possible to select the DALI version to use. It is possible to use DALI1 or DALI2;
- If the option "**DISABLE AUTOMATIC SCAN**" is checked, the automatic scanning of DALI side is disabled. The DALI side is scanned only on Ethernet command;
- If the option "**AutoRefresh**" is checked, the list of DALI devices is refreshed automatically;
- In the field "**NUM DEVICES**" the number of DALI devices connected to the converter is defined.

SEARCH...:


This section is used to scan the DALI network and assign automatically the ID to the DALI nodes connected to the converter. It is possible to reprogram the entire DALI network deleting and reprogramming the ID to all DALI devices ("Full Search") or set the ID only to the DALI devices without it ("Partial Search").

DALI FILE:

In this section, it is possible to save or load the DALI devices' list.

TEST DALI 2:

In this section it is possible to test DALI 2 devices (like sensors). It is possible to send commands or see the events from them. The communication will start by pressing "Connect" button.

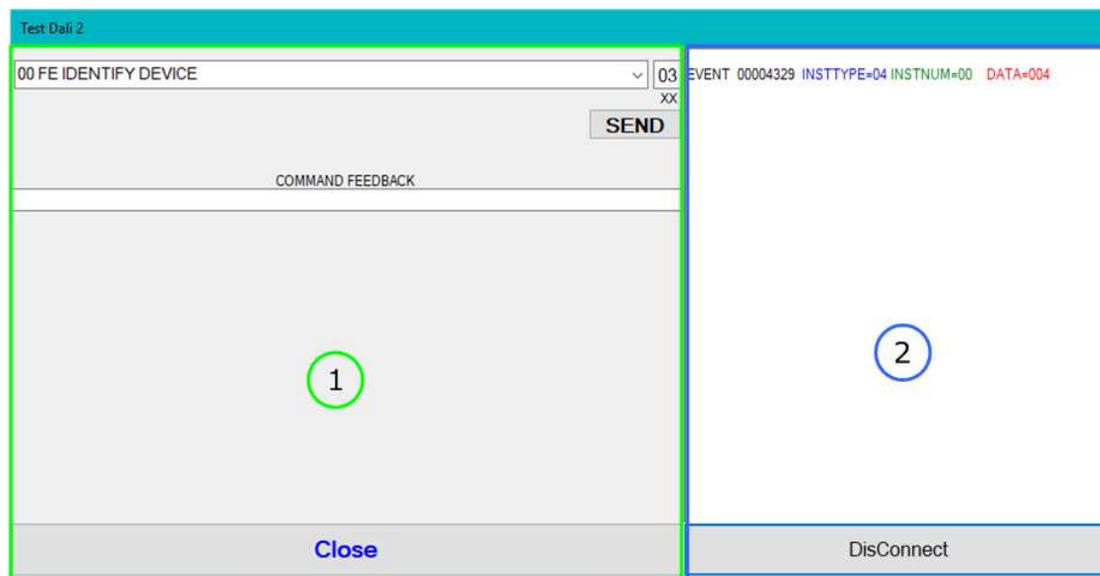

(1) Commands

(2) Events

Figure 10: "Test DALI 2" window

NETWORK SETTING:

By pressing the button in the Network view, it is possible to scan the full DALI network and find all the DALI devices, the groups set and the scenes configured.

By selecting the single DALI devices found, the single groups, the single scene or the entire DALI network, it is possible to manage and test the functioning of the network.

DEVICES:

The means of the fields for "DEVICE INFO" are:

- In the field "**Device Type**" the type of DALI device is printed;
- In the field "**Software version**" the software version of the DALI device is printed;
- In the fields "**Power Range**" the Min value, Actual Value and Max Value of the ADV of the DALI device is printed;
- In the fields "**DEVICE STATUS**" the actual status of the DALI device is printed;
- By clicking on "**LOAD VALUES**" button, the data from the DALI device will be read;
- By clicking on "**SET NEW ADDRESS**" button, the new address inside the button is set to the DALI device;
- By clicking on "**REMOVE ADDRESS**" button, the ID will be removed from the DALI device.

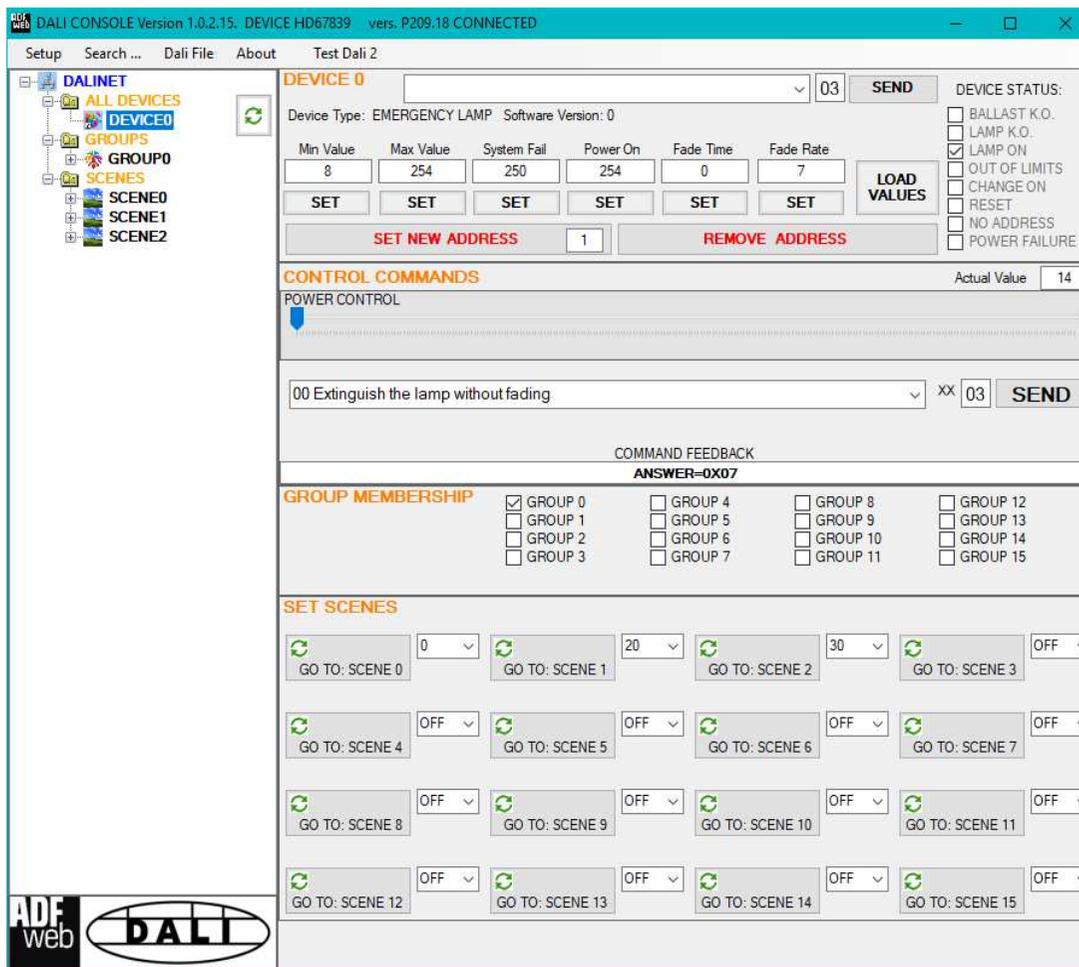


Figure 11: "Device settings" window

The means of the fields for the "CONTROL COMMANDS" section are:

- In the "**POWER CONTROL**" bar it is possible to change the actual ADV of the selected DALI device;
- In the field "**COMMAND**" it is possible to select a DALI command to send to the selected DALI device. For set commands, it is possible to insert the value to set in the field "**xx**". As soon as the command to send is selected, the command is sent: in order to send the same command more times, it is possible to press the "**SEND**" button;
- In the field "**COMMAND FEEDBACK**" the response from the DALI device is printed.



Note:

This section is used to test the functioning of the DALI device in the network and to set specific parameters if needed (like new Minimum or Maximum ADV value).

In the "GROUP MEMBERSHIP" section it is possible to see the Groups which the selected DALI device is in. The checked checkboxes mean that the device is in the correspondent groups, the unchecked checkboxes mean that the device is not included in the correspondent groups. It is possible to change the group settings for the selected DALI device by checking/unchecking the correspondent checkboxes.

In the "SET SCENES" section it is possible to see the programmed scenes of the selected DALI device, program new ones and activate them:

- By pressing the buttons "**GO TO: SCENE X**" it is possible to activate the correspondent scene inside the selected DALI device; the programmed ADV for the selected scene is defined in the drop-down list on the right;
- By selecting a value into the drop-down lists next to the "GO TO: SCENE x" buttons, it is possible to set the ADV associated to the correspondent scene. It is possible to select:
 - Value between 0 and 255: the scene will have the defined value of ADV;
 - ACT: the scene will take the programmed ADV value into the "POWER CONTROL" bar;
 - OFF: the scene is disabled.

GROUPS:

The means of the fields for the "CONTROL COMMANDS" section are:

- In the "POWER CONTROL" bar it is possible to change the actual ADV of the selected DALI group;
- In the field "COMMAND" it is possible to select a DALI command to send to the selected DALI group. For set commands, it is possible to insert the value to set in the field "xx". As soon as the command to send is selected, the command is sent: in order to send the same command more times, it is possible to press the "SEND" button;
- In the field "COMMAND FEEDBACK" the response from the DALI group is printed.



Note:

This section is used to test the functioning of the DALI groups in the network.

In the "SET SCENES" section it is possible to activate the programmed scenes to the selected group:

- By pressing the buttons "GO TO: SCENE X" it is possible to activate the correspondent scene inside the selected DALI group.

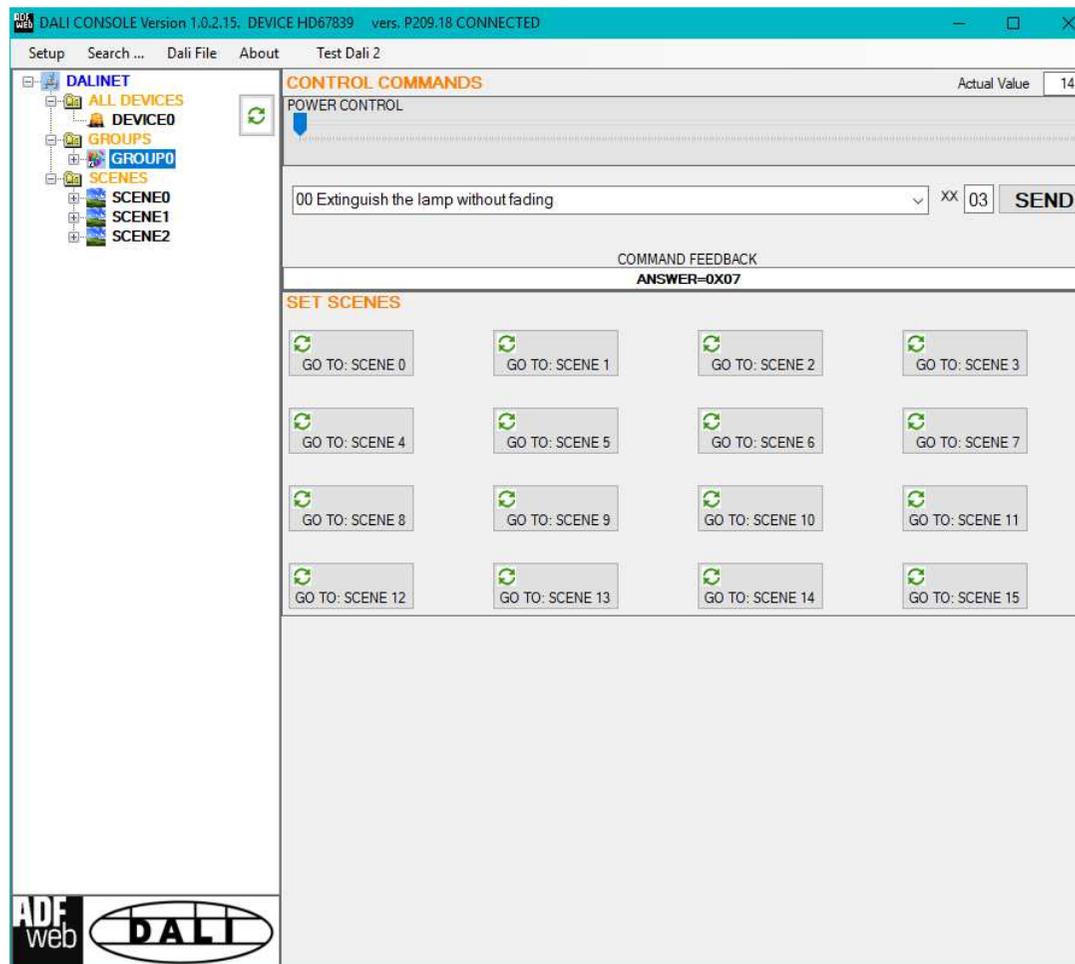


Figure 12: "Groups settings" window

ALL DEVICES (BROADCAST):

The means of the fields for the "CONTROL COMMANDS" section are:

- In the "POWER CONTROL" bar it is possible to change the actual ADV of the entire DALI network;
- In the field "COMMAND" it is possible to select a DALI command to send to the entire DALI network. For set commands, it is possible to insert the value to set in the field "xx". As soon as the command to send is selected, the command is sent: in order to send the same command more times, it is possible to press the "SEND" button;
- In the field "COMMAND FEEDBACK" the response from the DALI network is printed.



Note:

This section is used to test the functioning of the DALI network.

In the "SET SCENES" section it is possible to activate the programmed scenes into all the DALI devices that have them:

- By pressing the buttons "GO TO: SCENE X" it is possible to activate the correspondent scene in the DALI network. Only the devices that have it will accept the command.

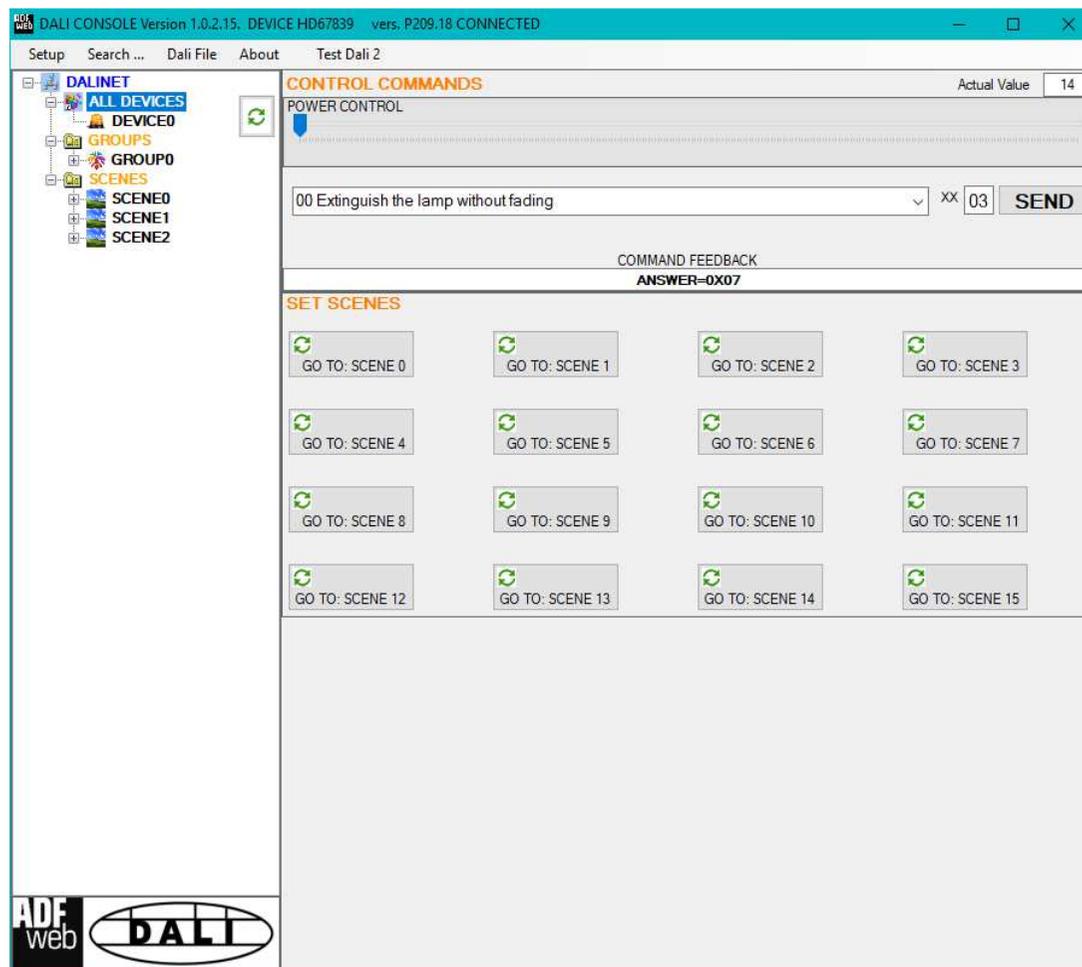


Figure 14: "Broadcast settings" window

ETHERNET PROTOCOLS

The HD67839 supports 4 different Ethernet protocols that can be used for controlling DALI side. The protocols are:

- DALI SCI: data transfer mode 1 (from Tridonic)
- DALI SCI2: data transfer mode 2 (from Tridonic)
- DALI SCI3: Ethernet commands (HEX format) (from ADFweb.com)
- DALI SCI4: Ethernet commands (ASCII format) (from ADFweb.com)

DALI SCI:

This set of simple commands allows to send DALI commands for controlling and reading DALI devices. They are fully compatible with SCI protocol from Tridonic.

Ethernet → HD67839

The transmission frame consists of 7 bytes:

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Start/Ctrl (*)	ADDR_HI (**)	ADDR_MID (**)	ADDR_LO (**)	DATA_HI (*)	DATA_LO (*)	Check (***)

(*) Start/Ctrl and DATA_HI...DATA_LO fields

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Identify/nDALI	Echo	DSI/nDALI	0	0	0	0

Where:

- ➔ bit 7: 0
- ➔ bit 6:
 - High: no data is sent via the DALI bus. Response only on PC (to check connection) when DATA_HI = 00h and DATA_LO = 01h, then enable / when DATA_HI = 00h and DATA_LO = 00h, then disable (default: enable)
 - Low: DALI (DSI) output DALI bus
- ➔ bit 5:
 - High: immediate reply to PC (not waiting for DALI answer)
 - Low: waiting for DALI answer (10 ms max.) DALI „NO“ after 10 ms
- ➔ bit 4:
 - High: Data output using DSI format DATA_HI = 0: DATA_LO = 8 bit DSI data DATA_HI > 0: DATA_HI and DATA_LO = 16 bit ext. DSI data
 - Low: Data output using DALI format DATA_HI: DALI HighByte DATA_LO: DALI LowByte
- ➔ bit 3: 0
- ➔ bit 2: 0
- ➔ bit 1: 0
- ➔ bit 0: 0

(**) ADDR_HI...ADDR_LO

It is set to zero.

(***) Check

XOR-combination of the previous 6 bytes (Start/Control ... to ... DATA_LO).

HD67839 → Ethernet

The answer of the HD67839 to the PC uses 3 bytes:

Byte 1	Byte 2	Byte 3
Start/Ctrl (*)	DATA (**)	Check (***)

(*) Start/Ctrl and DATA_HI...DATA_LO fields

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Identifier				Release		Status	

Description	Value	Meaning	Note
Identifier	5		
Release	0	Release 0	
Status	00	OK	
	01	DALI Data	
	10	DALI answer 'NO'	
	11	Error	Check sum DALI bus short circuit DALI receive error



(**) DATA

If Identify = 1 or Echo = 1: 0 = DALI disable: 1 = DALI enable
else: DALI answer byte

(***) Check

XOR-combination of the previous 2 bytes (Start/Control XOR DATA).

DALI SCI2:

This set of simple commands allows to send DALI commands for controlling and reading DALI devices. They are fully compatible with SCI2 protocol from Tridonic.

Ethernet → HD67839

The forward and backward frame both always consist of 5 bytes.
Send this frame to the HD67839:

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Control (*)	DATA_HI (**)	DATA_MID (**)	DATA_LOW (**)	Check Sum (***)

(*) Start/Ctrl field

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Identify/nDALI	Echo	DSI/nDALI	0	0	0	0

Where:

- bit 7: Monitor Enable. 1 = enable monitor function. If enabled the HD67839 sends all received DALI data back to the PC.
- bit 6:
 - High: no data is sent via the DALI bus. Response only on PC (to check connection) when DATA_HI = 00h and DATA_LO = 01h, then enable / when DATA_HI = 00h and DATA_LO = 00h, then disable (default: enable)
 - Low: DALI (DSI) output on the DALI bus
- bit 5:
 - High: immediate reply to PC (not waiting for DALI answer)
 - Low: waiting for DALI answer (10 ms max.) DALI „NO“ after 10 ms
- bit 4:
 - High: data output in DSI format
DATA_MID = 0: DATA_LO = 8 bit DSI data
 - Low: data output in DALI format:
DATA_MID: DALI HighByte (DALI address byte)
DATA_LO: DALI LowByte (DALI command byte)

data output in eD format:
DATA_HI: eD HighByte
DATA_MID: eD MiddleByte
DATA_LO: eD LowByte
- bit 3: 0

➔ bit 2-1-0:

- 1: not used
- 2: send DALI answer (8 bit data) (DATA_LO)
- 3: send DALI (16 Bit) (DATA_MID, DATA_LO)
- 4: send eD (25 bit data) (DATA_HI, DATA_MID, DATA_LO)
- 5: send DSI (8 bit data if DATA_MID = 0, else 16 bit data (DATA_MID, DATA_LO))

(***) Check Sum

XOR-combination of the previous 4 bytes (Control to DATA_LOW).

HD67839 → Ethernet

The HD67839 answer uses 5 bytes to the PC:

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Status (*)	DATA_HI (*)	DATA_MID (*)	DATA_LOW (*)	Check Sum (**)

(*) Status and DATA_HI...DATA_LOW fields

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Identifier				Release	Status		

Description	Value	Meaning	Note
Identifier	6		
Release	0	Release 0	
Status	000	OK	
	001	DALI answer 'NO'	
	010	DALI 8 bit data	
	011	DALI 16 bit data	
	100	DALI 24 bit data	
	101	DSI Data (8 bit if DATA_MID = 0, else 16 bit ext. DSI)	
	110	Not used	
	111	Error	Invalid backward frame Check sum DALI bus short circuit (coming) DALI receive error DALI bus short circuit (coming)



Industrial Electronic Devices

(**) Check Sum

XOR-combination of the previous 4 bytes (Status to DATA_LOW).

DALI SCI3:

This set of simple HEX commands allows to send DALI commands for controlling and reading DALI devices and to program the network.

Dali network scanning

This command is used to get the informations from the DALI nodes configured in the network.



Note:

This command must be sent to the UDP port 10000.

REQUEST

	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte9
Hex	0x44	0x41	0x4C	0x49	0x5F	0x49	0x4E	0x46	0x4F	0x3D
Text	D	A	L	I	_	I	N	F	0	=

RESPONSE

The converter sends back as response an array of data of 512 bytes. For each DALI node, 8 bytes are reserved. Here's the data mapping of the data array sent:

Byte	Data
0-7	Informations about DALI node 0
8-15	Informations about DALI node 1
16-23	Informations about DALI node 2
24-31	Informations about DALI node 3
32-39	Informations about DALI node 4
40-47	Informations about DALI node 5
48-55	Informations about DALI node 6
56-63	Informations about DALI node 7
64-71	Informations about DALI node 8
72-79	Informations about DALI node 9
80-87	Informations about DALI node 10
88-95	Informations about DALI node 11
96-103	Informations about DALI node 12
104-111	Informations about DALI node 13
112-119	Informations about DALI node 14
120-127	Informations about DALI node 15
128-135	Informations about DALI node 16
136-143	Informations about DALI node 17
144-151	Informations about DALI node 18
152-159	Informations about DALI node 19
160-167	Informations about DALI node 20
168-175	Informations about DALI node 21
176-183	Informations about DALI node 22
184-191	Informations about DALI node 23
192-199	Informations about DALI node 24
200-207	Informations about DALI node 25
208-215	Informations about DALI node 26
216-223	Informations about DALI node 27
224-231	Informations about DALI node 28
232-239	Informations about DALI node 29
240-247	Informations about DALI node 30
248-255	Informations about DALI node 31

Byte	Data
256-263	Informations about DALI node 32
264-271	Informations about DALI node 33
272-279	Informations about DALI node 34
280-287	Informations about DALI node 35
288-295	Informations about DALI node 36
296-303	Informations about DALI node 37
304-311	Informations about DALI node 38
312-319	Informations about DALI node 39
320-327	Informations about DALI node 40
328-335	Informations about DALI node 41
336-343	Informations about DALI node 42
344-351	Informations about DALI node 43
352-359	Informations about DALI node 44
360-367	Informations about DALI node 45
368-375	Informations about DALI node 46
376-383	Informations about DALI node 47
384-391	Informations about DALI node 48
392-399	Informations about DALI node 49
400-407	Informations about DALI node 50
408-415	Informations about DALI node 51
416-423	Informations about DALI node 52
424-431	Informations about DALI node 53
432-439	Informations about DALI node 54
440-447	Informations about DALI node 55
448-455	Informations about DALI node 56
456-463	Informations about DALI node 57
464-471	Informations about DALI node 58
472-479	Informations about DALI node 59
480-487	Informations about DALI node 60
488-495	Informations about DALI node 61
496-503	Informations about DALI node 62
504-511	Informations about DALI node 63

Data map for each DALI node

Offset	Description
0	Status of DALI node
1	ADV of DALI node
2	Response received after command from DALI node
3	<ul style="list-style-type: none"> ↘ Bit 0, 1, 2, 3 (least significant) = Type of DALI node ↘ Bit 4, 5, 6, 7 (most significant) = Version of DALI node
4	Min. settable value of DALI node
5	Max. settable value of DALI node
6-7	<p>Each bit has a different meaning. '0' means 'Group not configured', '1' means 'Group configured'.</p> <ul style="list-style-type: none"> ↘ Byte 6, Bit 0 (less significant) = Group 0 ↘ Byte 6, Bit 1 = Group 1 ↘ Byte 6, Bit 2 = Group 2 ↘ Byte 6, Bit 3 = Group 3 ↘ Byte 6, Bit 4 = Group 4 ↘ Byte 6, Bit 5 = Group 5 ↘ Byte 6, Bit 6 = Group 6 ↘ Byte 6, Bit 7 (most significant) = Group 7 ↘ Byte 7, Bit 0 (least significant) = Group 8 ↘ Byte 7, Bit 1 = Group 9 ↘ Byte 7, Bit 2 = Group 10 ↘ Byte 7, Bit 3 = Group 11 ↘ Byte 7, Bit 4 = Group 12 ↘ Byte 7, Bit 5 = Group 13 ↘ Byte 7, Bit 6 = Group 14 ↘ Byte 7, Bit 7 (most significant) = Group 15

Dali Scene scanning

This command is used to get the scenes configured into the DALI nodes configured in the network.



Note:

This command must be sent to the UDP port 10000.

REQUEST

	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte9
Hex	0x44	0x41	0x4C	0x49	0x5F	0x53	0x43	0x45	0x4E	0x3D
Text	D	A	L	I	_	S	C	E	N	=

RESPONSE

The converter sends back as response an array of data of 1024 bytes. For each DALI node, 16 bytes are reserved, one for each possible scene configured. Here's the data mapping of the data array sent:

Byte	Data
0-15	Scenes configured on DALI node 0
16-31	Scenes configured on DALI node 1
32-47	Scenes configured on DALI node 2
⋮	
⋮	
⋮	
1008-1023	Scenes configured on DALI node 63

The bytes reserved for the scenes can have these values:

- 0-254 = Value set for the selected scene
- 255 = Scene not configured



Note:

In each group of 16 bytes, the first one is for the Scene 0 and the last one is for Scene 15.

ADV Setting

This command is used to set the ADV for a specific DALI node, for a Group or for the entire DALI network.

REQUEST

Byte Number	Description
1	DALI ID + 1 (Hex)
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	DALI ID (Hex)
10	ADV to set (Hex)
11	0x00

The DALI ID can have different value in relation to the ADV to manage:

- 0 to 63 (0x00 to 0x3F) to manage a single DALI node;
- 64 to 79 (0x40 to 0x4F) to manage the Groups;
- 80 (0x50) for broadcast.

Scene Setting

This command is used to activate a programmed scene in a single DALI node, in a group or for the entire DALI network.

REQUEST

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	DALI ID + 0x80 (Hex)
10	Scene Number + 0x10 (Hex)
11	0x00

The DALI ID can have different value in relation to the ADV to manage:

- 0 to 63 (0x00 to 0x3F) to manage a single DALI node;
- 64 to 79 (0x40 to 0x4F) to manage the Groups;
- 127 (0x7F) for broadcast.

The Scene Number can have a value between 0 and 15.

Generic DALI command

This command is used to send a generic DALI command to a DALI node, to a group or to the entire network.

REQUEST

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	DALI ID + 0x80 (Hex)
10	DALI Command (from DALI specifications)
11	0x00

The DALI ID can have different value in relation to the ADV to manage:

- 0 to 63 (0x00 to 0x3F) to manage a single DALI node;
- 64 to 79 (0x40 to 0x4F) to manage the Groups;
- 127 (0x7F) for broadcast.

RESPONSE

The converter can send back two type of messages:

- "ANSWER=VAL" where 'VAL' is the answer from the DALI device;
- "ANSWER NOT RECEIVED" if any answer is received from the DALI node.

Scene Programming

This commands are used to program the scenes inside the DALI nodes. It is necessary to send two consecutive commands for the programming.

REQUEST 1

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	0xD1
10	ADV (Hex)
11	0x00

REQUEST 2

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	DALI ID + 0x80 (Hex)
10	Scene Number + 0x40 (Hex)
11	0x00

The DALI ID can have different value in relation to the ADV to manage:

- 0 to 63 (0x00 to 0x3F) to manage a single DALI node;
- 64 to 79 (0x40 to 0x4F) to manage the Groups;
- 127 (0x7F) for broadcast.

The Scene Number can have a value between 0 and 15.

Group Setting

This command is used to enable/disable the membership of the DALI nodes inside the group.

REQUEST

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	DALI ID + 0x80 (Hex)
10	Group Number + 0x60 (Hex) = Enabling or Group Number + 0x70 (Hex) = Disabling
11	0x00

The DALI ID can be from 0 to 63 (0x00 to 0x3F). The Group Number can be from 0 to 15.

Node ID Setting

These commands are used to program the ID Address on the DALI nodes. It is necessary to send them consecutively.



IMPORTANT: it is possible to connect a single DALI node to the HD67839 to program correctly the ID Node.

REQUEST 1

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	0xD1
10	(DALI_ID_to_set << 1) + 1 (Hex)
11	0x40

REQUEST 2

Byte Number	Description
1	0x00
2	0x10
3	0x00
4	0x00
5	0x00
6	0x02
7	0x04
8	Counter (increased for every command) (Hex)
9	0xFF
10	0x80
11	0x00



IMPORTANT: for correct setting, it is necessary to send the "REQUEST 2" two times. This is a specification from DALI protocol.

DALI SCII4:

This set of simple ASCII commands allows to send DALI commands for controlling and reading DALI devices and to program the network.

Getting data from DALI node

This command is used to read a specific DALI node in the network.

REQUEST**I_BAL_ch_00**

(ASCII format)

Where:

'ch' = ID of the DALI ballast to read (0 ÷ 63)

**Note:**

Just 'ch' is variable, the rest of the ASCII string is fixed.

RESPONSE

CHANNEL ch \r\n

ADV=val \r\n

TYPE=typ \r\n

ANSWER=rs \r\n

MIN=min \r\n

MAX=max \r\n

GRP1=g1 \r\n

GRP2=g2 \r\n

SCENES=scn

(ASCII format)

Where:

`ch` = ID of the DALI ballast read;

`val` = actual ADV set;

`typ` = type of DALI lamp;

`rs` = last response to DALI command;

`min` = minimum settable ADV;

`max` = maximum settable ADV;

`g1` = groups set inside the DALI device (from 0 to 7);

`g2` = groups set inside the DALI device (from 8 to 15);

`scn` = scenes programmed inside the DALI device (1 byte for each scene, total of 16 bytes).

**Note:**

Just `ch`, `val`, `typ`, `rs`, `min`, `max`, `g1`, `g2` and `scn` are variable, the rest of the ASCII string is fixed.

**Note:**

`\r` and `\n` are respectively `carriage return` and `line feed`.

**Note:**

For scenes not set, the value will be `FF` (ASCII).

Setting ADV to a DALI node

This command is used to set a specific ADV value into a single DALI node in the network.

REQUEST

S_BAL_ch_val

(ASCII format)

Where:

'ch' = ID of the DALI ballast to read (0 ÷ 63)

'val' = value of the ADV to set (0 ÷ FF, Hex representation)



Note:

Just 'ch' and 'val' are variable, the rest of the ASCII string is fixed.

Setting ADV to a DALI Group

This command is used to set a specific ADV value into a DALI group in the network.

REQUEST

S_GRP_ch_val

(ASCII format)

Where:

'ch' = ID of the DALI group to read (0 ÷ 15)

'val' = value of the ADV to set (0 ÷ FF, Hex representation)



Note:

Just 'ch' and 'val' are variable, the rest of the ASCII string is fixed.

Setting ADV to entire DALI network (broadcast)

This command is used to set a specific ADV value into a the entire DALI network (broadcast).

REQUEST

S_BRD_00_val

(ASCII format)

Where:

'val' = value of the ADV to set (0 ÷ FF, Hex representation)



Note:

Just 'val' is variable, the rest of the ASCII string is fixed.

Setting Scenes

This command is used to activate a specific scene into a DALI device, group or broadcast..

REQUEST

S_SCE_sc_id

(ASCII format)

Where:

'sc' = scene to activate (0 ÷ 15);

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).



Note:

Just 'sc' and 'id' are variable, the rest of the ASCII string is fixed.

Setting new Max value

This command is used to program the new maximum value of brightness in the DALI devices.

REQUEST

S_MAX_id_val

(ASCII format)

Where:

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).

'val' = value of new max value to set (0 ÷ FF, Hex representation)



Note:

Just 'id' and 'val' are variables, the rest of the ASCII string is fixed.

Setting new Min value

This command is used to program the new minimum value of brightness in the DALI devices.

REQUEST

S_MIN_id_val

(ASCII format)

Where:

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).

'val' = value of new min value to set (0 ÷ FF, Hex representation)



Note:

Just 'id' and 'val' are variables, the rest of the ASCII string is fixed.

Setting new Power ON value

This command is used to program the Power ON value in the DALI devices.

REQUEST

S_PON_id_val

(ASCII format)

Where:

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).

'val' = value of new power ON value to set (0 ÷ FF, Hex representation)



Note:

Just 'id' and 'val' are variables, the rest of the ASCII string is fixed.

Setting new Fail Power value

This command is used to program the new Fail Power value in the DALI devices.

REQUEST

S_FAI_id_val

(ASCII format)

Where:

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).

'val' = value of new Fail Power value to set (0 ÷ FF, Hex representation)



Note:

Just 'id' and 'val' are variables, the rest of the ASCII string is fixed.

Setting new Fade Rate value

This command is used to program the new Fade Rate value in the DALI devices.

REQUEST

S_RAT_id_val

(ASCII format)

Where:

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).

'val' = value of new Fade Rate value to set (0 ÷ FF, Hex representation)



Note:

Just 'id' and 'val' are variables, the rest of the ASCII string is fixed.

Setting new Fade Time value

This command is used to program the new Fade Time value in the DALI devices.

REQUEST

S_TIM_id_val

(ASCII format)

Where:

'id' = ID of the DALI node (0 ÷ 63) or group (64 ÷ 79) or broadcast (80).

'val' = value of new Fade Time value to set (0 ÷ FF, Hex representation)



Note:

Just 'id' and 'val' are variables, the rest of the ASCII string is fixed.

Start Full Search

This command is to start the full search of DALI network. The converter will remove all the addresses from the DALI devices and reprogram them (like "Full Search" on DALI Console software).

REQUEST

S_FULL_SEARCH

(ASCII format)

RESPONSE

FULL SEARCH STARTED

(ASCII format)

Start Partial Search

This command is to start the Partial search of DALI network. The converter search for new DALI devices without address and program them (like "Partial Search" on DALI Console software).

REQUEST

S_PARZ_SEARCH

(ASCII format)

RESPONSE

PARTIAL SEARCH STARTED

(ASCII format)

Check status of Full/Partial Search

This command is to check the progresses of the Search. It is possible to see if the converter is still searching or if it is finished.

REQUEST

S_TEST_SEARCH

(ASCII format)

RESPONSE

SEARCH STATUS=X (0 = finished) now N devices found"


(ASCII format)

Where:

'X' = Status ('0' means that the operation is completed).

'N' = Number of DALI devices found

MECHANICAL DIMENSIONS:

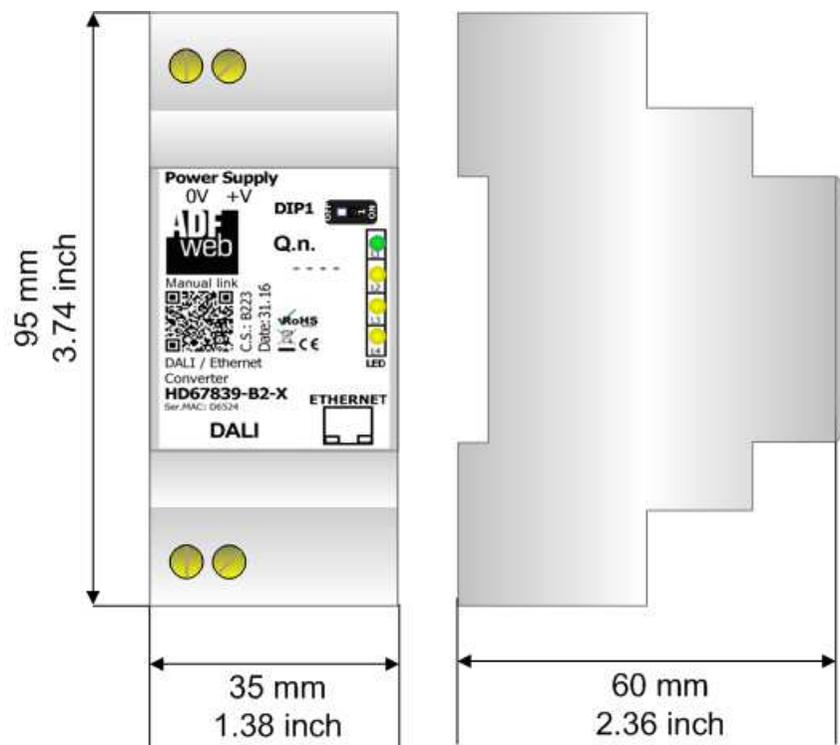


Housing: PVC
 Weight: 200g
 (Approx)

Figure 15: Mechanical dimensions scheme for HD67839-B2-x

ORDERING INFORMATIONS:

The ordering part number is formed by a valid combination of the following:

HD67839 - B 2 - x

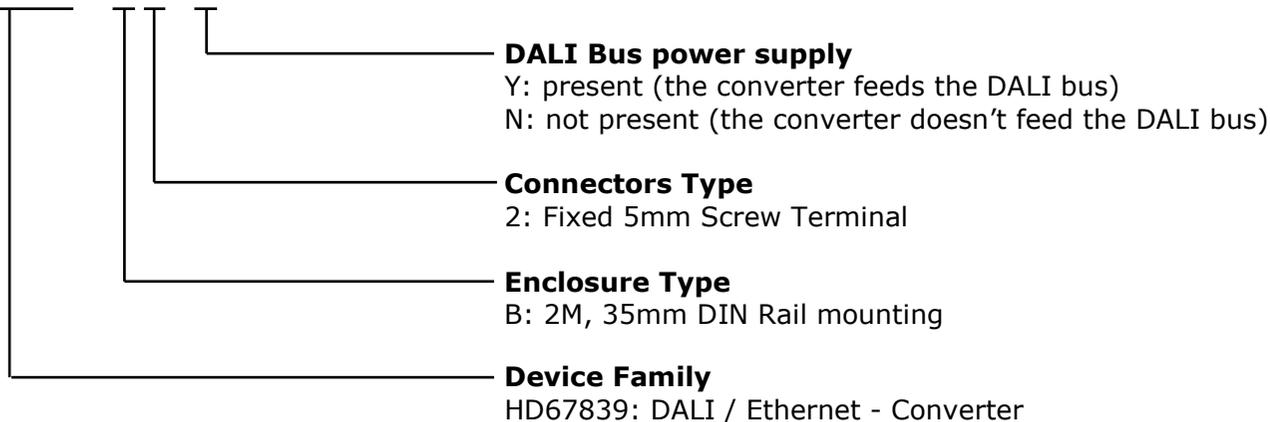

- Order Code: **HD67839-B2-Y** - DALI / Ethernet – Converter (DALI bus power supply present)
- Order Code: **HD67839-B2-N** - DALI / Ethernet – Converter (DALI bus power supply not present)

ACCESSORIES:

- Order Code: **AC34001** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V AC
- Order Code: **AC34002** - 35mm Rail DIN - Power Supply 110V AC 50/60Hz – 12 V AC

DISCLAIMER:

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

OTHER REGULATIONS AND STANDARDS:**WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

CE MARKING

The product conforms with the essential requirements of the applicable EC directives.

WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at www.adfweb.com.
Otherwise contact us at the address support@adfweb.com

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at www.adfweb.com. Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



ADFweb.com S.r.l.
Via Strada Nuova, 17
IT-31010 Mareno di Piave
TREVISO (Italy)
Phone +39.0438.30.91.31
Fax +39.0438.49.20.99
www.adfweb.com

